

SURFACE PREPARATION

For best results, clean and properly prepare all wall surfaces. Old wallcovering and paste residue should be removed. Walls must be clean, dry and smooth. Prepare surface with a premixed universal wallcovering primer. The primer should be tinted to the same color as the background color of your wallcovering to help hide seams.

Install (3) strips, stop and inspect the installation. If the installation is not satisfactory by the customer, stop hanging and call your retailer for assistance. In the event of any issue, please quote the item & run number that is identified on the roll label.

ADHESIVE

Use a clear, non-staining, Heavy Duty premixed adhesive. DO NOT dilute. Additional moisture can cause delamination of the surface paper from the backing.

CAUTION: A light weight or thinned adhesive will absorb into the product and could cause discoloration, delamination or adhesion failure.

PASTING AND HANGING

1. Draw a vertical line from ceiling to floor by using a plumb line or straight edge with level. This will be your guide for positioning one edge of the first strip.
2. Cut wallcovering strip to fit wall height, allowing a couple of extra inches at the top and bottom for trimming. Trim with a very sharp razor knife and change the blade often to avoid any tearing or pulling of the material. This wallcovering has been trimmed at the factory. However, the installer may at their discretion, trim if necessary.
3. This is a "Paste the Wall" or "Paste the Product" item. The installer can choose to either paste the wall or paste the back of the wallcovering.

PASTE THE WALL

Apply paste evenly to the wall, covering an area for one strip only. Take your strip directly to the wall. Paste and hang one strip at a time.

PASTE THE PRODUCT

Carefully apply an even coat of adhesive to the back of the wallcovering, working from the center to the edges and loosely fold (do not crease) the moistened strip toward the middle, pasted sides together, and take directly to the wall. Paste and hang one strip at a time.

4. Put the strip into place with a soft bristle smoothing brush. Carefully smooth out all air pockets and wrinkles. Butt seams together, do not overlap. Use your clean dry finger tips to lightly set seams. A neoprene seam roller can be used to set your seams. Avoid using too much pressure that could squeeze paste from the seam onto the surface. As each strip is installed, wipe the surface down thoroughly with clean water and a white cloth or sponge to prevent any paste residue from drying on the surface. Change the water in your bucket often. Wrapping inside and outside corners is recommended.

CAUTION:

For any Raised Print Patterns: Because of the special inks used in creating these fine papers, some color may release when the inks are wet, thus it is important to gently and evenly wipe the front of each sheet.

Aggressive wiping can damage the raised inks.

5. Trim excess material at the floor and ceiling with a straight edge and sharp razor knife. Again, change the blade often to achieve a clean cut.
6. Repeat procedure for each subsequent strip.

CLEANING

CAUTION: Wallcovering can be cleaned by gently wiping with a clean white damp cloth or sponge or by carefully using the soft brush attachment of a vacuum. Do not use any cleaning agent.

REMOVAL

To assist with removal, moisten the face of the non-woven with water, using a sprayer or sponge, wait 3-5 minutes, then remove.

CARE & MAINTENANCE

Stains should be removed as soon as possible to eliminate any possible reaction between the staining agent and the wallcovering. Time is especially important for removing materials containing colors or solvents, such as ballpoint ink, lipstick, oil, shampoo tints and some foodstuffs. If soil remains on the wallcovering too long, permanent discoloration may develop.

Vinyl wallcoverings should not be sprayed with wax or other protective coating. Such applications offer little protection and can discolor the material.

Ordinary dirt spots can be removed with a mild soap, warm water, and if necessary, a bristle brush to remove dirt from the crevices of deeply textured patterns. Clean from the bottom of the wall upward to protect the baseboard and prevent streaking. Rinse thoroughly with clean water from the top down using a sponge.

Deeply embossed wallcoverings need extra attention in the event that suds or loosened dirt lodges in depressed surfaces. Blot wallcovering dry with a soft, lint-free towel. For more difficult stains that are only surface deep, the use of a stronger detergent is recommended. Try an inconspicuous spot first before attempting the entire wall. Always rinse the wall well after applying a detergent.

Not recommended for cleaning wallcovering are steel wool or powdered abrasive cleaners because they mar the surface, leaving an unsightly

appearance. Do not use active solvent-type cleaning preparations, such as nail polish remover, tar and bug removers, etc., because they will remove print and/or finish from the wallcovering.


MYLAR WALLCOVERING

Stains and paste on the mylar surface should be removed as quickly as possible to eliminate any possible reaction between the staining agent and the wallcovering. Ordinary dirt and smudges can be removed with a mild soap and warm water.

Clean from the bottom of the wall upward to protect the baseboard and to prevent streaking. Rinse thoroughly with clean water from the top down using a sponge.

Blot wallcovering dry with a soft, lint free towel. For more difficult stains, use of a stronger detergent is recommended. Try an inconspicuous spot first before attempting the entire wall. Always rinse the wall well after applying a detergent. Not recommended for cleaning is steel wool or powdered abrasive cleaners. Do not use active solvent-type cleaning preparations. Such as nail polish remover, tar and bug removers, or liquid cleaners with high alcohol content.

DISINFECTING

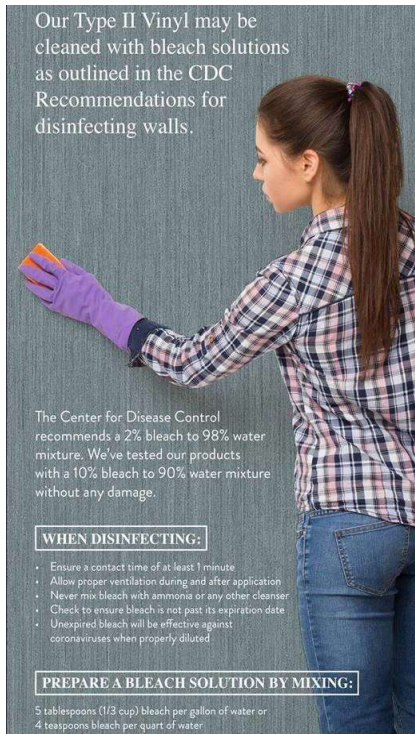

Our Type II Vinyl may be cleaned with bleach solutions as outlined in the CDC Recommendations for disinfecting walls.

The Center for Disease Control recommends a 2% bleach to 98% water mixture. We've tested our products with a 10% bleach to 90% water mixture without any damage.

WHEN DISINFECTING:

- Ensure a contact time of at least 1 minute
- Allow proper ventilation during and after application
- Never mix bleach with ammonia or any other cleanser
- Check to ensure bleach is not past its expiration date
- Unexpired bleach will be effective against coronaviruses when properly diluted

PREPARE A BLEACH SOLUTION BY MIXING:

5 tablespoons (1/3 cup) bleach per gallon of water or
4 teaspoons bleach per quart of water

WINFIELD

INSTALLATION INSTRUCTIONS CARE & MAINTENANCE

THOM FILICIA PERFORMANCE LUXURY

**For additional information or technical support contact
Winfield Customer Service at 800-468-6800.**

Marketed Nationally by Kravet Inc.